


K	LOC.	ACCT	SUB	WORK ORDER NO	CITY NO	KEY NO	GRID NO	CP NO	PROJECT NO
1	700	3800	0801	17391	708	0			

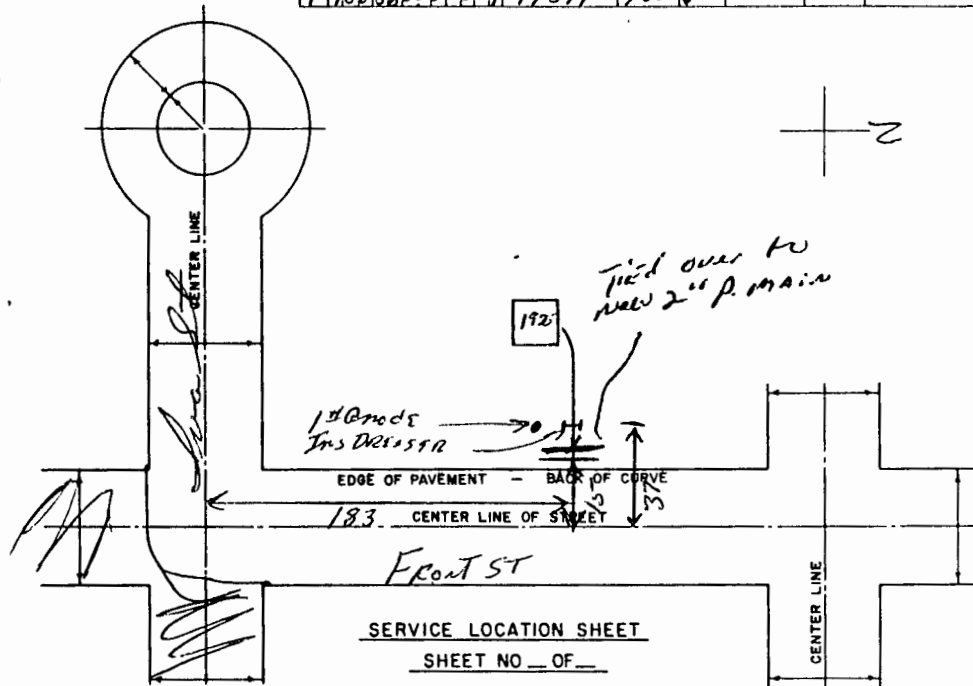

Bond Made At  
Dresser-Tracer wire  
cut at Transition

19 25 Front St